

WorkHero

DRY CANISTER

Ideal for:

- Shops
- Restaurants/Cafes
- Motels/Hotels



CD2

INTRODUCTION

Congratulations on the purchase of your new Work Hero vacuum cleaner. There are many useful features built into your cleaner and we recommend that you carefully read this instruction manual so that you may take best advantage of them.

Before you begin

This product must be operated in accordance with these instructions and used only for cleaning to remove DRY dirt and dust from carpets, flooring and fabrics.

Safety reminders and taking care of your cleaner

PLEASE READ THESE INSTRUCTIONS THOROUGHLY. This will ensure you obtain full benefit from your new cleaner. Keep this instruction manual in a handy place for future reference.

This cleaner must only be connected to an AC supply at the voltage shown on the rating plate.

IMPORTANT SAFETY INSTRUCTIONS

This appliance was not designed for use with water Dry vacuum only. Do not use for any purpose other than described in this user's guide. When using your Vacuum, basic safety precautions should always be observed, including the following:


Read all instructions before using this vacuum.

1. **Do not** leave vacuum cleaner unattended when it is plugged in. Unplug from outlet when not in use and before removing filters. Always remove the plug after use.
2. **Do not** immerse the vacuum into water or other liquids.
3. **Do not** pickup building materials such as plaster dust, wood shavings, sand etc.
4. Use only as described in this manual. Use only manufacturer's recommended accessories.
5. **Do not** use with damaged cord or plug. **Do not** use vacuum cleaner if it has been dropped, damaged, left outdoors, or dropped into water. Return appliance to authorised service centre for examination, repair or adjustment.
6. **Do not** pull or carry by cord. Do not use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
7. **Do not** unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. **Do not** handle plug or vacuum cleaner with wet hands.
9. **Do not** use the vacuum cleaner to pick up large objects or objects that are likely to damage the vacuum cleaner.
10. Keep hair, loose clothing, fingers, feet and all parts of body away from openings, rotating agitator and other moving parts. Do not operate cleaner in bare feet or when wearing open toe shoes.
11. **Do not** pick up hot coals, cigarette butts, matches or any hot, smoking, or burning objects.
12. **Do not** pick up hard or sharp objects such as glass, nails, screws, coins, etc.
13. **Do not** use without all filters in place. Use **ONLY** filters and accessories provided by manufacturer. Failure to do so will void the warranty.
14. Turn off all controls before plugging or unplugging vacuum cleaner into electrical outlet.
15. Use extra care when vacuuming on stairs.
16. **Do not** pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in the presence of explosive liquids or vapour.
17. **Do not** pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
18. **Do not** use in an enclosed space filled with vapours given off by oil based paints, paint thinner, moth proofing substances, flammable dust, or other explosive or toxic vapours.

19. Using the unit outdoors or on wet surface may result in electric shock.
20. **Do not** put any objects into openings. **Do not** use with any opening blocked. Keep free of dust, lint, hair and anything else that may reduce air flow.
21. **Always store your appliance indoors in a cool, dry area.**
22. Keep your work area well lit.
23. Keep end of hose, wands and other openings away from your face and body.
24. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance By a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.
25. Always remove the plug from the socket prior to dusting and cleaning. Refrain from removing the plug with wet hands.
26. **Do not** rinse the vacuum cleaner with water, as this may damage the unit.
27. **Do not** use the unit to vacuum water or damp areas, as this may damage the unit.
28. **Do not** cover the ventilation outlets, as this may result in the unit becoming deformed and may cause fire due to excessive heat.
29. Airflow from the ventilation duct may result in personal injury if contact is made with the body for long periods of time.

KNOW YOUR PRODUCT

1. Flexible Hose
2. Deluxe Chrome Rod
3. Handy Carry Handle
4. On/Off Switch
5. Gulper Floor Tool
6. 4 Robust Castor Wheels
7. Blockage Indicator
8. Cable 10m (not shown)
9. Dusting Brush
10. Crevice Tool (not shown)
11. Blower Inlet

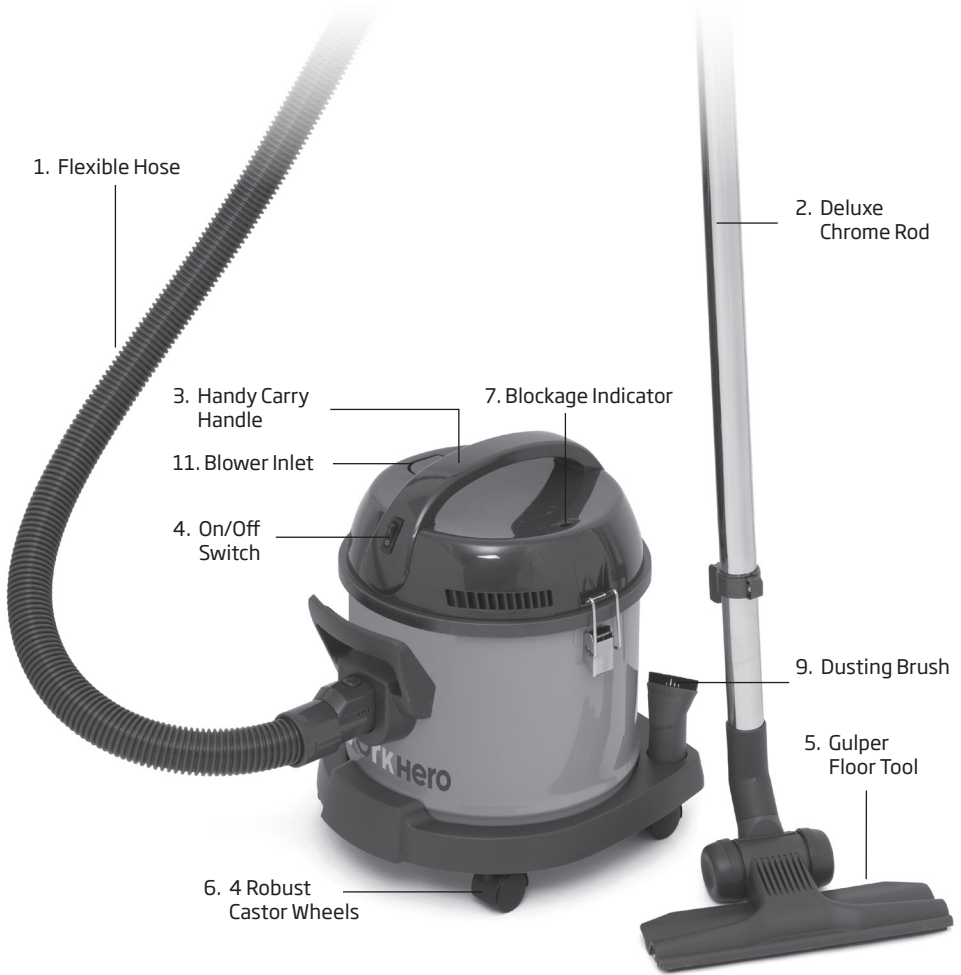

Due to continual development in improving product some parts may vary from those pictured. The manufacturer reserves the right to change specifications without notice.

CARE AND MAINTENANCE

Caution:

Power cable

Always disconnect the cleaner from the power outlet by pulling out the plug directly, **NEVER** by pulling on the power cable.

Faults

Do not continue to use this appliance if it appears to be faulty or the power cable is damaged. If damaged, return the cleaner for repair by an authorised service centre in order to avoid a safety hazard. Consult the troubleshooting guide in this manual if your vacuum cleaner fails to operate properly. Contact an authorised service agent if the problem persists.

After use

Switch the cleaner off and remove the plug from the mains power supply.

Protecting the environment


Once you have unpacked the unit, please consider the environment when disposing of the packaging. Where possible please recycle the packaging.

ACCESSORIES

Your Work Hero vacuum cleaner has been designed to handle a number of cleaning chores - effortlessly and efficiently. Accessories including a crevice tool and dusting brush are conveniently located on the top of the cleaner. Always switch off and remove the plug before attaching any accessories or cleaning the appliance.

Gulper Floor Tool

The Gulper Floor Tool is ideal for cleaning carpets and hard floors.

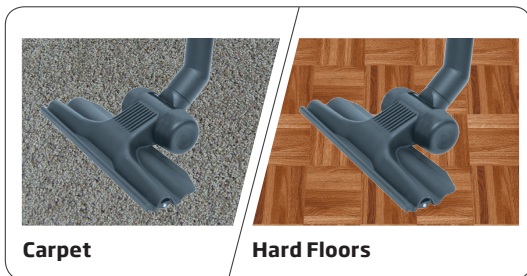

TROUBLESHOOTING

PROBLEM	CAUSE	REMEDY
Motor does not start or stops	No power supply	Check cable, plug and socket. If still inoperative see service agent
Suction force is gradually decreasing	Canister is full, suction hose is blocked or dirty filters	Disconnect cleaner from power then empty canister. Remove objects from hose, replace filters

NOTE: When removing the power cord from the electrical outlet, grasp the plug, not the cord.

EMPTYING CANISTER / CHANGING FILTER

Empty the canister when full. The canister must be emptied when the suction starts to decrease or when the blockage indicator located on top turns red. Disconnect cleaner from power and uncouple hose from inlet duct. Release the dust compartment latches located at the sides of the cleaner.

1. UNDO LATCH

Remove the top housing from the canister (Fig. 1).



Fig. 1

2. REMOVE TOP HOUSING

Empty the contents of the canister into a rubbish bin. Before replacing top housing, remove the motor inlet filter and shake out any dust (Fig. 2).



Fig. 2

3. FILTER MAINTENANCE

Remove filter bag from canister and wash in tepid water. A neutral detergent can be used insuring it is rinsed out thoroughly. Allow filter to dry naturally (Fig. 3).

NOTE:It is recommended to clean the filter bag every 3-4 months. This will improve performance and cleaning efficiency.



Fig. 3

4. BLOWER FUNCTION

For blower function, connect the hose end into the blower port, ensuring it clicks into place. (Fig. 4).

NOTE: Must keep the hose inlet open. Before using the blower function, remove the dust bag and ensure the tank is dry and empty.



Fig. 4

CUSTOMER CARE

Please contact customer care 1800 815 270 to find your local spare parts provider.

PRODUCT NUMBER	PRODUCT DESCRIPTION
32440396	Cloth Filter Bag
32201214	Inlet Filter



This warranty commences from the original date of purchase and is not transferable; please retain your original proof of purchase for any warranty claims. This warranty is valid only in the country where the cleaner is purchased.

The cleaner must be operated in accordance with these instructions. This cleaner is not designed for the collection of vitreous building material including particle board, construction products and similar products such as wood/fibres, cement, fillers, fibre glass etc or excessive or frequent sand. The infrequent pick-up of these materials in these circumstances may be harmful to your cleaner and may void the manufacturer's warranty.

Accessories and consumables including dust bags and filters, unless defective in manufacture, are not subject to this warranty. In order to prolong the life of accessories and consumables, regular care and maintenance is recommended.

When properly used and cared for, your cleaner will render excellent service; refer to the instruction manual for further details, as misuse or failure to follow the instructions makes this warranty void. In the event of service or advice being needed, please contact Electrical Home-Aids Pty Ltd, ACN 119 462 798, Level 1, Building 2 Brandon Business Park, 530 Springvale Rd, Glen Waverley, VIC 3150. Customer Care: 1800 815 270.

The decision to repair or replace the cleaner is at the sole discretion of Electrical Home-Aids Pty Ltd. If Electrical Home-Aids Pty Ltd decide to repair or replace the cleaner, it will do so at its own cost.

Electrical Home-Aids Pty Ltd is unable to accept responsibility under this warranty for any repair work not carried out by an authorised Electrical Home-Aids Service Agent or from the use of non-genuine parts. If any part is no longer available or manufactured, Electrical Home-Aids Pty Ltd will replace it with a genuine functional replacement part. This warranty does not apply to the cost of replacing any parts of the product due to normal wear and tear, alterations, improper installation, physical abuse, misuse or accidental damage. Any transportation costs involved in the repair of defective parts shall be borne by the claimant.

If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the cleaner is chargeable. The repair or replacement of the cleaner under this warranty does not extend the original period of warranty.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Competition and Consumer Act and other State and Territory laws.

"Our goods come with guarantees that cannot be excluded in the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure."

Keep this Guarantee and your receipt as proof of purchase

Purchase Date/...../.....

Our policy is one of continuous development and accordingly we reserve the right to change specifications without prior knowledge.

Electrical Home-Aids Pty Ltd
(ACN 119 462 798)
Level 1, Building 2, Brandon Business Park,
530 Springvale Road, Glen Waverley, Victoria, 3150.

workHero

Product Code: 11300116

Electrical Home-Aids Pty Ltd
ACN 119 462 798)
Level 1, Building 2
Brandon Business Park
530 Springvale Rd
Glen Waverley, VIC 3150
Customer Care: 1800 815 270

Made in China

TECHNICAL INFORMATION

Model: CD2

240V~50Hz

1200W MAX

