

S

sauber

SMART

Bagged



15.



16.



17.





Smart Bagged

Congratulations on the purchase of your new Sauber Smart Bagged vacuum cleaner. There are many useful features built into your cleaner and we recommend that you carefully read this instruction manual so that you may take best advantage of them.

1. Handle
2. Air Relief Valve
3. Telescopic Tube
4. Hose
5. On/Off Button
6. Variable Suction Control
7. Blockage Indicator
8. Cable Rewind Button
9. Accessory Holder
10. Power Cable
11. Hose Inlet
12. Lid Release Button
13. Wheels
14. Combination Floor Head

Accessories:

15. Upholstery Tool
16. Dusting Brush
17. Crevice Tool

Specifications:

Power: 1800W

Dust Capacity: 2.5L

Noise Level: 78dBa

Telescopic Tube: Chrome

Power Cable Length: 6.25m

Hose Length: 1.5m

Net Weight: 6.4kg

Please contact Sauber Customer Service on 131 929 to find your local spare parts provider.



Before You Begin

This cleaner must be operated in accordance with these instructions and used only for domestic household cleaning. This cleaner is not fit to be used as an industrial cleaner and will void the manufacturer's warranty if used inappropriately.

Please read the manual before operating cleaner

This will ensure you obtain full benefit from your new cleaner. Keep this Instruction Manual in a convenient and safe place for future reference.

Important

Always switch the machine off and remove the plug from the electricity supply before cleaning your appliance, when not in use, or attempting any maintenance task. This cleaner should only be used for its intended purpose as described in these instructions.

Precautionary measures:



1. Do not operate the vacuum cleaner too close to heaters, radiators or other hot surfaces.



2. Before inserting the power plug into the power supply, make sure your hands are dry.



3. Before turning on the vacuum cleaner, remove any large objects from the floor or cleaning surface in order to prevent damage to the filter.



4. When you want to pull the power plug from the power supply, **do not** use the power cable, gently pull the power plug from the power socket.



5. Do not use the vacuum cleaner to pick up water or liquids.

Safety Precautions & Warnings



IMPORTANT! Always switch off the wall outlet, cleaner and remove the plug from the electricity power supply before cleaning your appliance, when not in use or attempting any maintenance task. The cleaner must only be connected to an AC power supply at the voltage shown on the rating label. This cleaner should only be used for its intended purpose as described in this instruction manual. Never operate the vacuum cleaner without filters.

When using your vacuum cleaner, basic precautions should always be observed, including the following;

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they **do not** play with the appliance.
3. To prevent electrical shock, **do not** immerse the appliance, power cord or power plug into water or other liquids.
4. To prevent electrical shock, **do not** use the vacuum cleaner outdoors or on wet surfaces.
5. Always check the power cord before use, the power cord and the plug should be in a good condition and must not be damaged. If the power supply cord is damaged or defective, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. **Do not** unplug by pulling on the power cord. To unplug, grasp the plug not the power cord. Use only Australian and New Zealand electrical safety approved extension cords.
7. **Do not** pull or carry the appliance by the power cable, use the power cable as a handle or pull the power cable around sharp edges or corners. Avoid running the appliance over the power cable.
8. Ensure the appliance is switched off before unplugging.
9. **Do not** handle or operate the appliance with wet hands and follow electrical safety precautions at all times.
10. Extreme caution should be exercised when using the appliance on stairs.

11. **Do not** attempt to change the attachments while the appliance is plugged in to mains power supply. Switch off and remove plug from mains power supply. Use only manufacturer's recommended accessories.
12. **Do not** operate the vacuum cleaner too close to the heaters, radiators and other hot surfaces.
13. **Do not** use the appliance to pick up flammable items or combustible liquids (i.e. petrol, hot ashes, cigarettes, matches, explosive materials or anything burning) or use in areas where such substances and items may be present.
14. **Do not** use the appliance to pick up toxic materials (i.e. chlorine bleach, ammonia).
15. Ensure the appliance is disconnected from the mains power supply before connecting the hose to the unit.
16. **Do not** operate or use the appliance without the dust bag and/or filters in place.
17. Before vacuuming, remove any large or sharp objects from the floor or cleaning surface in order to prevent damage to the filter.
18. If the hose inlet, floor head or the telescopic tube is blocked, switch off the cleaner straight away and remove from the mains power. First clear the blocked object before attempting to start the vacuum cleaner again.
19. Hold the plug when rewinding onto the cord reel. To prevent accidental injury **do not** allow the plug to whip when rewinding.
20. **Do not** extend the power cable beyond the yellow mark.
21. **Do not** leave the appliance unattended when it is connected to a mains power supply.
22. Before carrying out any maintenance service or cleaning the filters, always switch off the vacuum cleaner and disconnect the plug from power supply.
23. Keep ends of the hose, telescopic tube and other openings away from your face and body.
24. **Do not** use the vacuum cleaner if it is damaged or breaks down. Check the electrical regularly for defects. If connection cables, electrical hoses, electrical contacts and electric tubes are damaged, have them replaced immediately.
25. **Never** clean the vacuum cleaner or any of the electrical parts, especially the electrical connections with water or liquid cleaners.
26. **Never** attempt to make any modifications electrically to the vacuum cleaner.
27. Always store the appliance indoors in a cool and dry place.
28. **Do not** pick up water, dry household use only.
29. Damage caused by improper use or by not observing the instructions in this manual will void warranty.

Instructions for Use

WARNING! Always remove the plug from the power socket before fitting or removing accessories.

Assembling the vacuum cleaner



1. Insert the hose end into the hose inlet until it clicks into position.



2. Insert the telescopic tube into the combination floor tool.



3. Fit the other end of the telescopic tube to the handle.



4. To rewind the power cable, press the cable rewind button with one hand and guide the cable with the other hand to ensure that it does not whip causing damage to the cable. Never extend the power cord further than the yellow mark.



Instructions for Use (continued)



5. Press the On/Off button to switch the vacuum on.



6. Rotate the speed control dial to adjust the suction of the vacuum.

Accessories



Carpet



Hard Floors

Combination Floor Tool

This multi purpose combination floor tool easily switches from a carpet cleaning tool to a hard floor cleaning tool.



Upholstery Tool

For vacuum furniture and upholstery.



Dusting Brush

Cleaning blinds, bookshelves and lampshades is made easy with this dusting brush.



Crevice Tool

Eliminates dust from hard to reach places such as from corners and in between cushions.

Maintenance

WARNING! Ensure the cleaner is not connected to the mains powers supply when performing any maintenance duties.

The cleaner should be switched off and disconnected from the mains supply. Never operate without filters as damage to cleaner could occur. Empty the dust tank after every use, failing to do so may clog the filters and cause poor suction.

Changing the dust bag



1. Open the front cover. Pull the dust bag holder upwards to remove the dust bag.



2. Replace the paper bag when it is full of dirt and put in a new one.
3. Push the bag holder back and close the cover by pressing down until it is locked.



Blockage indicator



1. When the blockage indicator turns red or the suction is low, empty dust bin or check any blockage in the air channel.

Cleaning and Replacing the Pre-Motor Filter

IMPORTANT! Always remove the power plug from the power socket before performing any maintenance.



The pre-motor filter should be replaced every six months or when it becomes visibly dirty.

Always operate the cleaner with clean filters; otherwise, there may be a reduction in the suction power or motor damage may result.


Note: Do not use a washing machine to wash the filter or a hair drier to dry the filter.

1. Open the Dust Bag Cover, remove the bracket and the dust bag assembly.
2. Gently remove the pre-motor filter.
3. Replace with a new filter or clean as described.



Maintenance (continued)

Cleaning and Replacing the Exhaust Air Filter

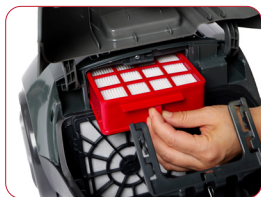

Note: It is recommended to replace the filter every 6 months or when it becomes visibly dirty.

1. Open the front cover and remove the dust bag.
2. Firmly grip the HEPA filter tab and pull out. Replace with a new filter, re-insert dust bag and close front cover.



Troubleshooting

Problems and Solutions

Please contact Godfreys Commercial Customer Support on 131 929 to find your local spare parts provider.

Fault	Cause	Solution
Motor does not start or stops.	No power supply.	Check cable, plug and socket. If still inoperative, contact service agent.
Suction force gradually decreases.	Filters are dirty, suction hose or telescopic tube is blocked.	Clean or replace filters, remove objects from hose and telescopic tube.



Spare Parts

Description	Product Code
Hose	31220375
Rod	31300417
Filter Set	32200661
Dust Bag 5PK	32440603
Dust Bag 20PK	32440347
Motor	34200189



1 Years Warranty Sauber Smart Bagged



Your Sauber Smart, in the case of domestic use, has a one year warranty against product defects and failures when the product is used in accordance with the terms and conditions of this warranty statement.

This warranty is provided by Future Innovation Holdings Pty Ltd Trading as Godfreys Commercial ABN 98 677 632 021. This warranty commences from the original date of purchase and is not transferable. You are required to retain your original proof of purchase for any claims under this warranty. This warranty is valid only in the country where the cleaner is purchased.

Your Sauber Smart must be operated in accordance with these instructions and used only for domestic household cleaning to remove dry dirt and dust from household carpets, flooring and fabrics. Your Sauber Smart is not fit to be used as an industrial cleaner, and is not designed for the collection of vitreous building material including particle board, construction products and similar products such as wood/ fibres, cement, fillers, fibre glass etc or excessive or frequent sand. The infrequent pick-up of these materials may be harmful to your cleaner and will void this warranty.

Accessories and consumables including dust bags and filters, unless defective in manufacture, are not subject to this warranty. In order to prolong the life of accessories and consumables, regular care and maintenance is recommended.

Refer to the instruction manual for further regarding the use and care of your Sauber Smart, as misuse or failure to follow the instructions voids this warranty.

In the event of service or advice being needed, or if you would like to make a claim under this warranty, please immediately stop using the Sauber Smart and contact Godfreys Commercial, 2 Drake Boulevard Altona, VIC 3018, or on 131 929, Monday-Friday 9am-5pm AEST or commercialsupport@godfreys.com.au.

The decision to repair or replace the cleaner is at the discretion of Godfreys Commercial depending on the

circumstances and requirements of any applicable law. If Godfreys Commercial decide to repair or replace your Sauber Smart, it will do so at its own cost. Any transportation costs involved in a claim under this warranty shall be borne by the claimant.

Godfreys Commercial is unable to accept responsibility under this warranty for any repair work not carried out by an authorised Service Agent, or any defect arising from or in connection with the use of non-genuine parts. If any part is no longer available or manufactured, Godfreys Commercial will replace it with a genuine functional replacement part. This warranty does not apply to the cost of replacing any parts of the Sauber Smart due to normal wear and tear, alterations, improper installation, physical abuse, misuse or accidental damage.

If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the Sauber Smart will be at claimant's cost.

The repair of the Sauber Smart under this warranty does not extend the original period of warranty. If your Sauber Smart is replaced under this warranty, the replacement will be covered by this warranty for the remainder of the original warranty period. However, you may still have statutory rights after this time.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Competition and Consumer Act 2010 (Cth) and other State and Territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.